

## 7. Program remote control

### 7.1 Add remote control

In unlock mode, long press **3** button (about 3 seconds) until you heard one short 'Di' sound, red light flashes, then press any button on remote, short 'Di Di' sound will be heard, meanwhile light off, which indicates pairing is completed;

### 7.2 Remove remote control (be caution of this operation)

Long press **3** button for about 5 seconds until you heard one long 'Di' sound --- all paired remotes will be removed.

**Note:** One alarm lock can pair with 8 remote controls at most, the pairing method is the same as the pairing remotes. If exceeded, the first remote will be removed.

## 8. Increase alarm locks

One remote can control multiple locks simultaneously. Please refer to step 7 for operation. (For other alarms except for lock, please pair it according to their own instruction)

## 9. Search for vehicle or alarm lock

Press **5** or **6** on the remote, alarm lock will make sounds to find out your vehicle.

## 10. Low battery indication

### 10.1 Low battery of Lock

LED light will flash once every second, and there will be 'Du Du' sound when lock and unlock, please replace batteries in time, otherwise sound will weaken and lead to abnormal operation of locking/unlocking.

### 10.2 Low battery of Remote

Light will dim or wireless range will be shortened, please replace the battery asap.

## 11. Cautions

**11.1** The unit alarm sound is very loud, never put the unit close to your ear.

**11.2** In order to reduce risks and losses, change new batteries immediately, when battery voltage is low. If you do not use the unit for a long time, please remove the battery to avoid battery leakage.

**11.3** The unit is waterproof, but it can't be soaked in the water. In freezing weather, please dry off the water near the lock bar in case the water freezes which may cause the lock bar get stuck.

## TROUBLE SHOOTING GUIDE

Trouble	Reasons	Solution
locked mode Automatic alarm	1. The lock bar is not plugged in lock hole or not deep enough 2. Vibration detect function is on	1. Make sure the lock bar is plugged in lock hole and deep enough. 2. Set off the vibration detect function when belongings are easily moved by others.
Can't unlock	1. Wrong password 2. Low battery 3. Temperature is too low 4. Lock bar gets stuck	1. Check whether the password is right. 2. Check battery, when battery voltage is low, change new batteries, alkaline battery is suggested. 3. Please put the unit below -10°C, low temperature may cause low battery voltage which leads to fault. 4. Check whether the lock bar gets stuck.
Can't lock	1. Low battery 2. Lock bar gets stuck	1. Check battery, when battery voltage is low, change new batteries, alkaline battery is suggested. 2. Check whether the lock bar gets stuck.
No vibration detect function	1. Vibration detect function is off 2. The strength of vibration is low	1. Check whether the vibration detect function is on. 2. More than 0.6 kilogram impact force will cause the vibration.
unable to remote	1. remote control has been removed by mistake 2. low battery of remote	1. pair it again 2. replace with new battery



2022.9.22 V2.0

-3-

## Wireless Remote Control Password Alarm Lock

Model : Y787R(G)


## Owner's Manual

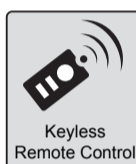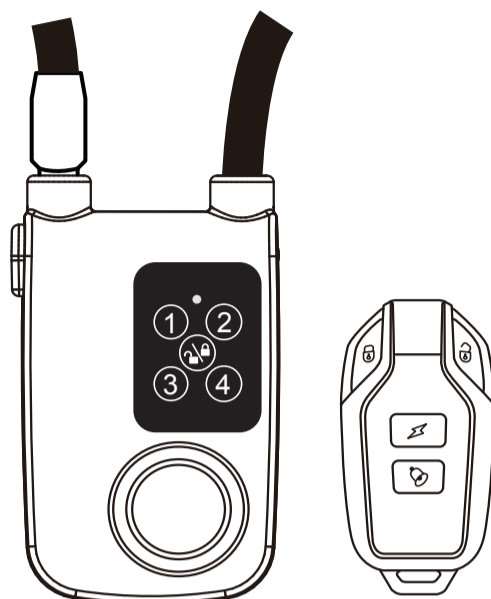

## FEATURES

- Keyless, password and remote to lock and unlock.
- Vibrating or removing the lock activates alarm.
- Cutting cable activates alarm.
- Three times wrong code activates alarm.
- Alarm sound up to 110dB.
- Programmable 4 digital password, up to 256 kinds of passwords.
- Remote control to lock / unlock / find vehicle / pair, LED indication.
- 3 x AAA alkaline batteries operation(not included) and low battery indicator.
- IP55 waterproof.
- One remote can control multiple locks or similar remote alarms at the same time.
- One lock can pair with 8 remotes at most.

## DESCRIPTION OF COMPONENTS

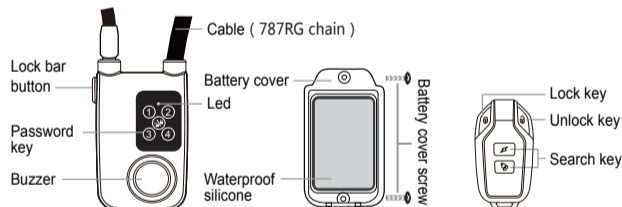

## TECHNICAL PARAMETERS


- 3 x AAA batteries for alarm lock, life lasts for 3 months.
- 1\*CR2032 batteries for remote, life more than 3 years.
- Remote-controlled distance :≥40m
- Cable specification: length 80cm (40cm/120cm) / diameter:10mm
- Chain specification: length 80cm (40cm/100cm) / diameter:6mm
- Working temperature: -10°C~+60°C
- Storage temperature: -20°C~+80°C
- Size: 92X55X34mm

## INSTALLATION

### 1. Install battery

Unscrew the battery cover to install three alkaline batteries, make sure install with correct polarity (Fig1), the unit will sound 'Bi', screw the battery cover, and tighten the two screws.

**Note:** screws must be tightened to ensure waterproofness.

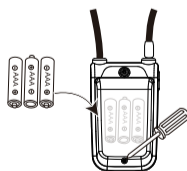


### 2. Lock

**2.1** Insert the lock, press **3** button once (Fig2) or press **6** button on the remote, the unit will sound 'Bi Bi' (it won't be able to pull out the lock bar when press the lock bar button), then the unit is in the lock mode.

**Note:** The lock bar must be plugged to the bottom, otherwise it won't be able to lock.

**2.2** In the lock mode, LED will flash every 3 seconds.


**Note:** 5 seconds after locking, there goes one 'Di' sound which means it is in alarm detection status. If the alarm is triggered, please input correct password then press **3** or press **6** on the remote button to turn it off.

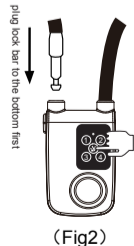

-1-

### 3. Unlock

In the lock mode, enter your 4 digits password (factory setting password '1234') then press **3** button or press **6** button on the remote, it will make one long 'Bi...' sound, that means it exited lock mode, LED will be off, you can press lock bar button and pull out lock bar now (Fig 3).

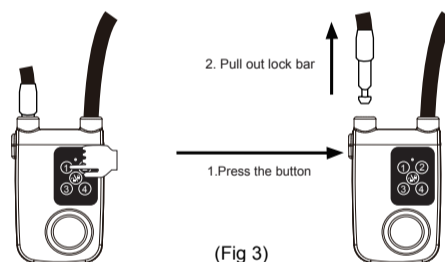

### 4. Alarm mode

**4.1** In the alarm detection mode, alarm will go off for 2 seconds once vibration or movement of Lock is detected. If vibration is detected again in 3 seconds, alarm will go off and last for 30 seconds. Input password then press **3** or press **6** button on the remote to turn it off.

**4.2** In the lock mode, when input wrong password, the unit will make 'DU' sound instantly. When you heard the 'Du' sound, please input right password. If inputted wrong password three times within 10 seconds, the unit will alarm for 30 seconds.

**4.3** In the lock mode, if someone cut the cable, the unit will go off instantly. Input password then press **3** or press **6** on the remote to turn it off.

### 5. Change password

**5.1** Make sure the unit not in the lock mode.

**5.2** Press and hold the **1** button 3 seconds, unit will sound 'Bi' tone and the LED will flash, enter the old password (factory setting password '1234'), the unit will sound 'Bi Bi' tone, then enter the new password (the password must be 4 digits), after the passwords are completed, the unit will sound 'Bi Bi Bi' to remind the password change is successful.

**Note:** \* The password won't lost if power is off or batteries are replaced.

\* If you forget the password, please remove one batteries, then long press **3** button and reload batteries, release it when you hear 'Di' sound in 3 seconds. In this way, password will be restored to default one "1234".

### 6. Setting the vibration alarm

**6.1** Make sure the unit not in the lock mode.

**6.2** Setting the vibration alarm

OFF: long press **2** button for more than 3 seconds until you hear 'Di', vibration alarm function is off.

On: long press **2** button for more than 3 seconds until you hear 'DiDi', vibration alarm function is on.

**6.3** Vibration sensitivity adjustment (3 levels sensitivities can be adjusted in unlock mode.)

Long press **4** button for more than 4 seconds until there goes one long 'Di' sound (red light flash), then you will hear one short 'Di' sound, which means the highest sensitivity (default one).

Press **4** button again, there goes 'DiDi' short sounds which stands for medium sensitivity.

Press **4** button one more time, there goes 'DiDiDi' short sounds which stands for the lowest sensitivity.

If no operation in 10 seconds, red light will be off, and automatically exit the setting.

-2-

尺寸：95X200mm 折叠双面印刷 80G书纸 单色印刷  
V2.0 取消防拆功能